



SC0004
white finish

General description

- Smartflow® hair dryer is a bathroom wall mounting hair dryer with a functional, robust and trendy design that blends into any space perfectly such as hotels, hospitals and elderly care centers.
- This powerful and long-lasting hair dryer is activated automatically when hand piece is removed from the main body and has a total power of 850 W.
- Silence and quick-drying. The hair dryer works efficiently thanks to a high speed and a powerful air flow, all of this with a low noise level and saving time and money.


Components & materials

- **SC0004**: white ABS thermoplastic one-piece cover, 3 mm thick. Cover fixed to the base by means of 2 metal screws.
- Thermoplastic PP + talcum base plate, 3 mm thick with four Ø 6 mm holes for wall mounting.
- Universal brush motor, 15.000 rpm that includes a self-resetable thermal cut-off.
- 700 W heating element that includes a safety thermal cut-out.
- PP UL94-V0 helicoidal fan wheel.
- White handle, tube-handle adaptor and handle holder made in PBT (Polybutylene).
- Hose made in polyurethane with stretching springsteel spiral.
- White ABS support and fitting.

Technical Specifications

Voltage	220- 240 V
Frequency	50/60 Hz
Electrical Isolation	Class II
Total power	850 W
Consumption	3 A
Motor power	150 W
Rpm	15,000
Heating element power	700 W
Dimensions	510x196.5x138 mm
Weight	1.8 Kg
Effective airflow	40 m3/h (667 L/min)
Air velocity	79 Km/h
Air temperature (10 cm distance/21°C)	50°C
Sound pressure (*) (at 2m)	69 dBA
Protection rating	IP23
Length of the hose	800-2,000 mm

Dimensions

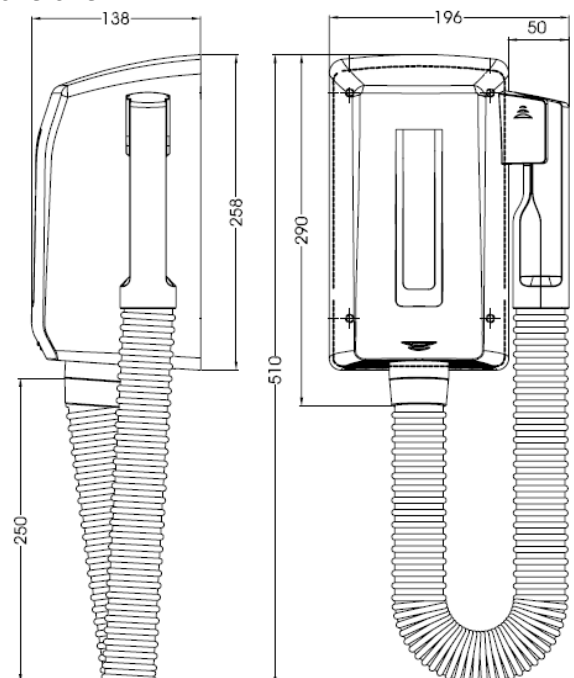


Dimensions: ± 4%

Operation

Take down the ergonomic handset from the main body. The drying process initiates automatically. Please direct the handset to the hair at your own convenience. Once the drying process is over, hang the handset to the main body. The hair dryer stops automatically.

Mounting

Recommended heights distance from the floor

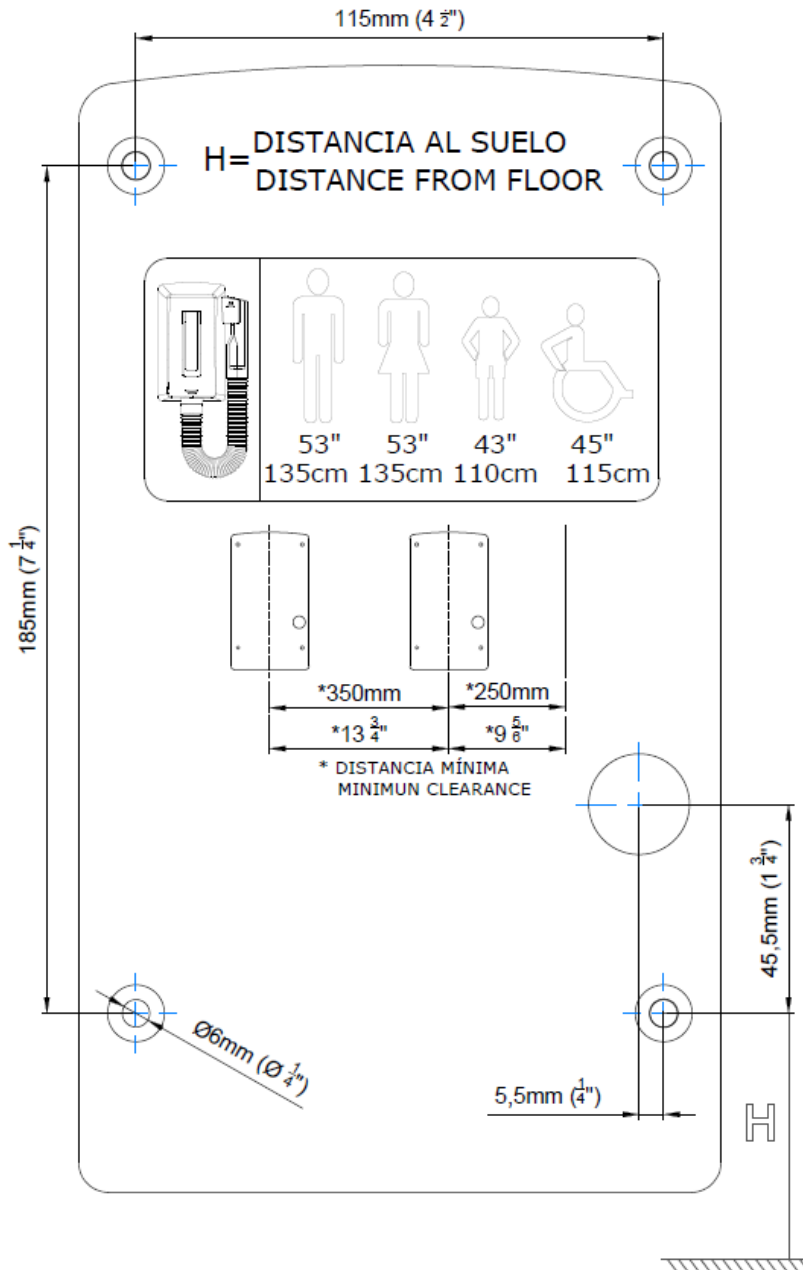

Certificates & Qualifications



Mediclinics, S.A., reserves the right to make changes and/or modifications to the products and their specifications without prior notice.
Revision 10-20 © mediclinics S.A.

