

## SURFACE

## Lever activated



**DJFP035**  
White epoxy finish



**DJFP035B**  
Matte black epoxy finish



**DJFP035C**  
Bright finish



**DJFP035CS**  
Satin finish

### General Description

- Foam soap dispenser of 1.5 L capacity, manufactured in stainless steel AISI 304, 0,8 mm thick, to be installed directly on the wall and lever-operated by means of a stainless steel lever.
- Available in four finishes (white, black, bright and satin) these foam soap dispenser models have a functional, robust and trendy design that matches the new range of Mediclinics bathroom accessories. This allows this soap dispenser to blend into any space perfectly.
- Suitable for high traffic facilities and for public use.
- It is recommended to use foam soaps with the following characteristics:
  - Maximum alcohol content of 80%
  - Density between 0.95 and 1.05 kg/dm<sup>3</sup>
  - Use specific foam products.

**It does not support soaps that contain methanol, chlorine or solid or abrasive particles.**
- It is mounted on the wall by means of four Ø4 stainless steel screws (provided) with their corresponding Ø 6mm plastic plugs (also provided).


### Components and materials

- **DJFP035:** stainless steel AISI 304, white epoxy finish.
- **DJFP035B:** stainless steel AISI 304, matte black epoxy finish.
- **DJFP035C:** stainless steel AISI 304, bright finish.
- **DJFP035CS:** stainless steel AISI 304, satin finish.
- **WALL PLATE:** made of stainless steel AISI 304, 0,8 mm thick. It is mounted on the wall by means of four Ø4 stainless steel screws (provided) with their corresponding Ø 6mm plastic plugs (also provided).
- **HINGED COVER:** for operator convenience and speed of service. Opening on top with provided Mediclinics key that allows soap refill.
- **LEVEL DISPLAY:** made of PVC and placed in the front part. It indicates the level of soap available inside the soap dispenser constantly.
- **INNER PLASTIC TANK:** made of plastic material, it prevents oxidation and that can be easily removed for cleaning and disinfection purposes.
- **LEVER:** made of stainless steel.
- **VALVE:** anti-drip corrosion resistant valve that dispenses 1.5 ml of soap per service. This anti-drip valve, which dispenses liquid soap, is easily interchangeable with the valves of the other soap dispensers of the same line.

### Technical Specifications

<b>Dimensions</b>	240 x 110 x 133 mm
<b>Capacity</b>	1,500 ml
<b>Body, cover &amp; base plate thickness</b>	0.8 mm
<b>Inner Tank Thickness</b>	2.5 mm
<b>Net weight</b>	1.25 Kg
<b>Quantity dispensed per pump</b>	0.8 ml

### Dimensions

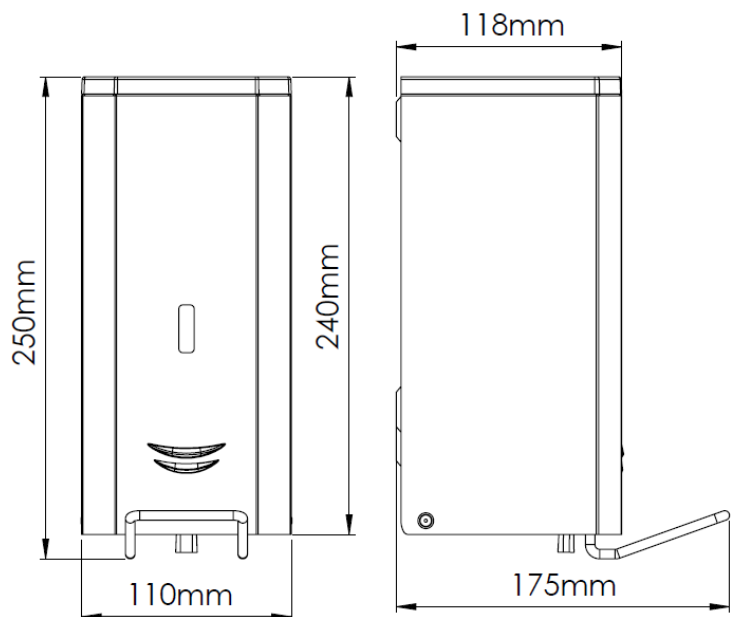

Dimensions: ±4%

---

## OPERATION

---

Place one hand just under the soap dispenser valve and press the center push-button until the end of the soap dosage.

---

## MOUNTING TEMPLATE

---

10-15 cm from shelf.

---

Mediclinics, S.A., reserves the right to make changes and/or modifications to the products and their specifications without prior notice.  
Revision 07-20

© mediclinics. S.A

